



[www.pres-on.com](http://www.pres-on.com)

## WHAT YOU'LL NEED

### PRES-ON SUPPLIES

- Self-Stick Score-N-Snap Plastic — Lo-Tack
- Self-Stick Easel

### OTHER SUPPLIES

- Craft Knife
- Scissors
- Ruler

## TIP

- TO REMOVE THE LINER:  
Take a pin and slide in between the liner paper and plastic, and pull up toward the top corner. This will release enough liner for you to easily pull it down.

## Mounting Photos & Other Images on Pres-On® Score-N-Snap™ Plastic



1. Working on a flat surface remove the liner paper from the mounting board a little bit at a time. (See TIP at left.)
2. Starting at the top of the mounting board roll the photo/graphic art paper right side up slowly onto the adhesive making sure there are no wrinkles. If you have wrinkles or it is crooked lift up and lay again. When you have it down where you want it rub lightly in a back-and-forth motion to adhere the photo/graphic art paper to the plastic.

*Continued next page*

FOR INFO OR TO ORDER CALL 800-323-1745



[www.pres-on.com](http://www.pres-on.com)


### TIP

- Use a piece of Score-N-Snap plastic slightly larger than your project requires. Once you use your knife and ruler to score-and-snap it, it will be perfectly straight, even if you put it down a little crooked.

3. Score around all four sides with your craft knife and ruler, and snap off the excess photo/graphic art paper and plastic.



4. Add a **Pres-On® Self-Stick™** easel to the back of the project, and display.

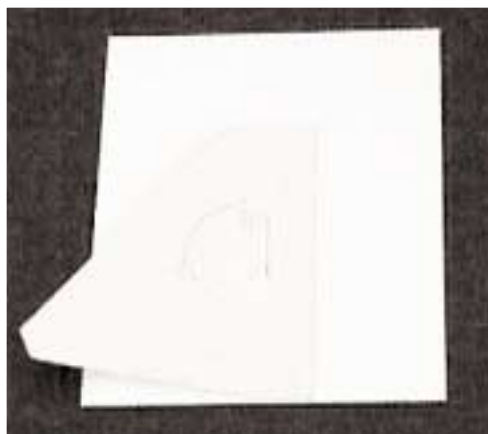

FOR INFO OR TO ORDER CALL 800-323-1745